


# SOME NOTES

- A turfhold down kit is an option ( 2 x 6003224 + 12x 3606164 + 12 x 3506004)
- The correct timing sequence is: 1. 6, 2, 4, 3, 5
- a spike offset per spike section is preferable

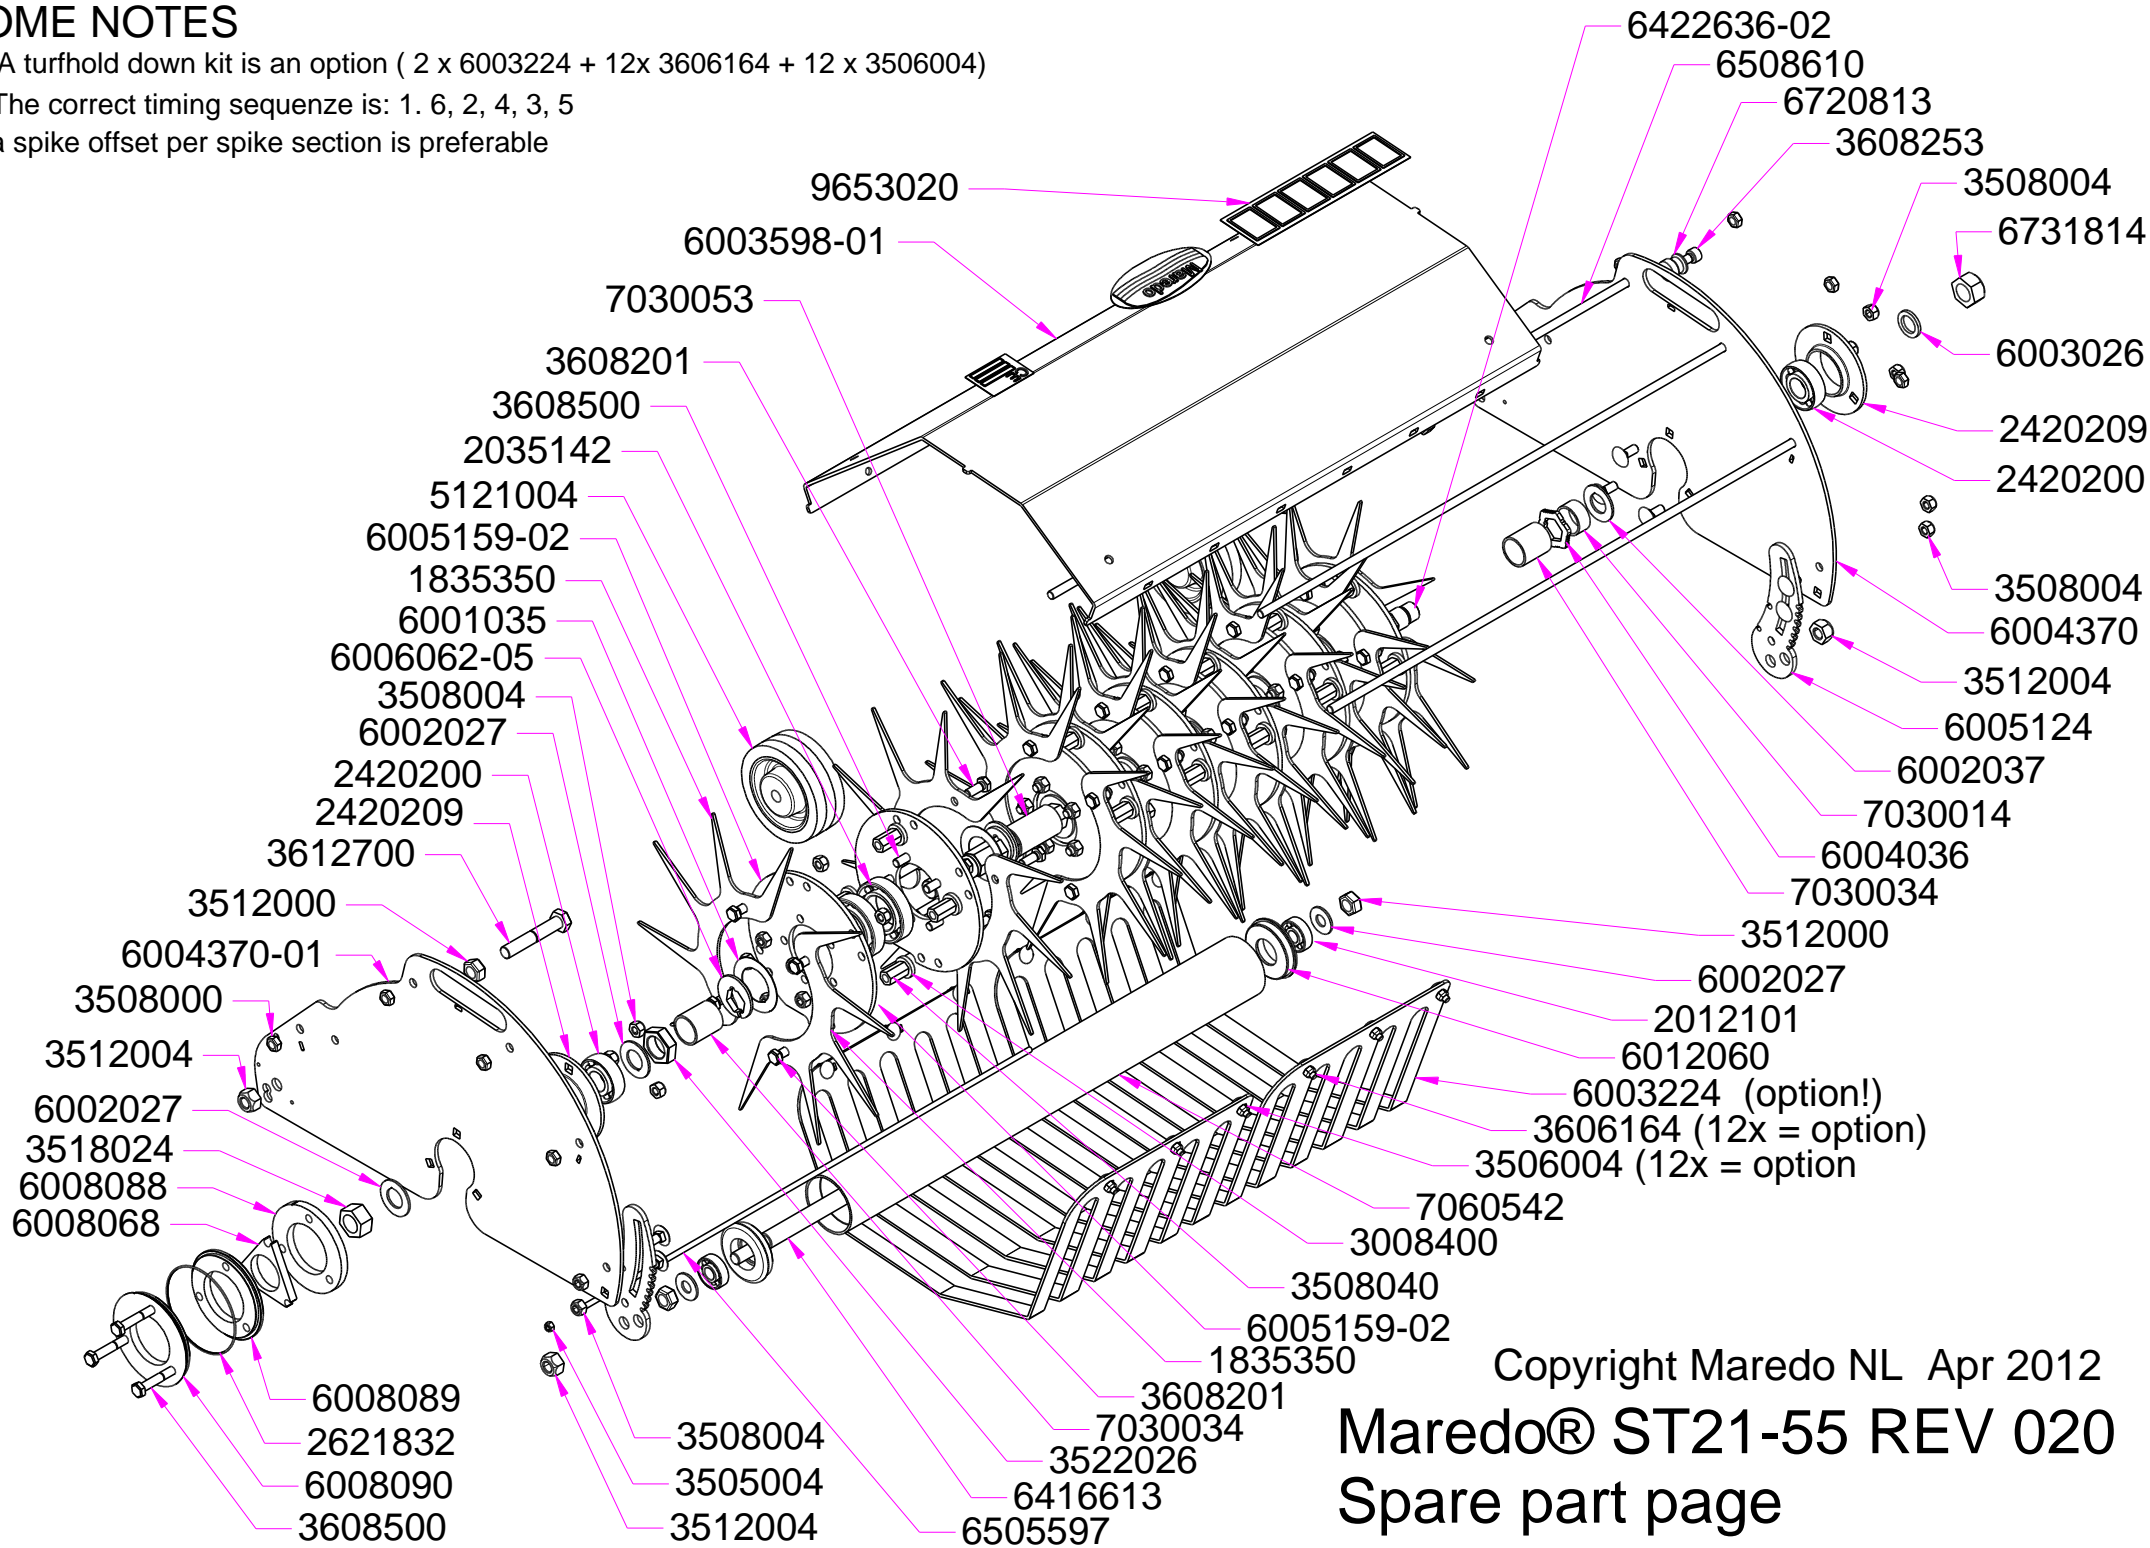

Copyright Maredo NL Apr 2012

**Maredo® ST21-55 REV 020**  
**Spare part page**